

# Using the AMX Touchpanel

Incubator Classroom

## Basic Mode Operation

For single screen use, Basic Mode is the simplest route to take. Choose 1 screen and 1 source, and get started. In this example, the **Center** screen is chosen and the built in **Lecturn PC** is routed to the screen.



1. Touch Panel to begin



2. Press the **Basic** button



3. Select the **Screen** to display information on



4. Select the source for the screen. Choices are displayed on the left side.



5. Select your sub-option (which computer to display)



6. Adjust media volume or microphone volume on the right side



7. **Blank Screen** button will blank the screen from the projector.

## Advanced Mode

To use more than 1 screen or to access more advanced features, switch from basic to advanced mode. There are 2 ways to do this: Press the **Advanced** mode button in the lower right hand corner, or press the Home button in the lower left hand corner and then select **Advanced** mode instead of Basic.



8. **Advanced Mode** button allows for multiple screens and enhanced options.

# Using the AMX Touchpanel

Incubator Classroom

## Advanced Mode Operation

To gain more control and flexibility, Advanced Mode is the best choice. This mode enables Video Conferencing, multiple screen displays, and auxiliary inputs like a video camera or other video device. Keep in mind that audio follows the last screen you select, so if you want to play a DVD, set that screen up last.



1. Press the **Advanced** button from the **Home** menu, **OR** choose **Step 2**



2. Press the **Advanced** button on the bottom right corner to change modes.



3. Select **Source** to display. *More choices are now available on the left side.*



4. Press the blue square with the **Screen** name on it. *Screens turn gold when selected. The **Blank** button will turn off projector*

### SMARTBoard



5. Select the **SMARTBoard Source** button, and choose the Right or Left SMARTBoard Screen

### Audio Conference



6. Use the keypad to dial numbers and audio and microphone controls to reduce feedback.

### Video Conference




7. **Video Conference** options include camera controls, mics, and sub-menus.

### Power-Off System



8. Turning off the system: (1) Press the **Home** button in the lower left hand corner & select **Power Off**

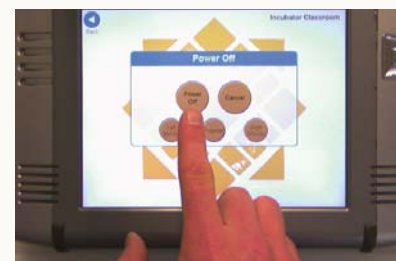

9. Press **Power Off** or select a screen to power off. **Cancel** returns to the **Home** menu