

How to Use Remote Control For DVD

- Dial Operator "0" to get your assigned channel.
- Ask for remote control. Do not hang up the Phone or you will lose the remote.
- To bring up the DVD menu press "2"
- To enter a menu selection press "1"
- To scan up menu press "8"
- To scan down menu press "9"
- To scan right in menu press "6"
- To scan left in menu press "5"

- To Play the DVD press "1"
- To scan backward press "4"
- To scan forward press "7"
- To stop press "*"
- To pause the DVD press "3"
- (If you press 7 or 4 while in pause you will slow motion forward or backwards in increasing increments according to the number of times the scan is pushed.)
- To bring up the DVD Status display press "#"

When you are done playing your DVD please hang up the phone

**To schedule this service, please call 4-2867
by 4pm the Previous Workday.**

