

Pixie Controlled Classroom Start-up Guide

If you have problems with this system, Dial “O” or 4-2867 from the classroom phone.

Press the “On” button on the Pixie Projector Controller

(Wait 90seconds for the projector warm-up.)

Computer Projection

Connect the 15-pin VGA cable and attached audio cable to the monitor and audio-out ports on your laptop.

Press the input button marked “COMPUTER” on the Pixie Controller and select “Computer 1”.

(You should see the input displayed on the upper right corner of the screen)

Be sure that your computer is set to display to two screens.

Use the volume “UP” and “Down” button on the Pixie Control to set the sound level from the projector.

To project from DVD/VCR or Other Video Sources

Turn on projector as above.

Connect your DVD/VCR etc. to the Video/Audio connections on the VGA wall plate using your standard video (yellow) and audio (red & white) VCR cables.

Press the “VIDEO” button on the Pixie Controller to select the “Video” input.

(You should see the input displayed on the upper right corner of the image on the screen)

Operate your external source in its normal fashion.

Use the volume “UP” and “Down” button on the Pixie Controller to set the sound level from the projector.

This system cannot be used for Audio Only presentations.

When Finished, Press the “OFF” Button on the “Pixie Control”