

Smart Classroom Projection Quick Start Guide

Press the “**Projector On**” button on the SmartPanel Control **ONCE**(Wait 90sec for the warm-up).

Press the “**Projector Off**” button on the SmartPanel before you leave the room.

If you have problems with this system, Dial “O” or 4-2867 from the classroom phone.

A: Computer Projection

1. Connect the 15-pin VGA connectors to the monitor port on your laptop.
2. Press the button marked “Computer” on the SmartPanel control.
3. Set your computer’s display resolution to a maximum of 1024x768.
4. Adjust your laptop for either dual or external monitor support.
5. Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound in the room.
(See your desktop support technician for more information on the settings needed for 3 or 4.)

B: DVD or VCR Projection (Turn the player “off” when finished)

1. Press the “Power” button on the DVD/VCR machine to turn on the unit (left side).
2. Press the “DVD/VCR” button on the SmartPanel control.
3. Insert a DVD or a VHS tape into the unit.
4. Press the appropriate “VCR” or “DVD” button *on the attached remote control* to enable the appropriate function buttons.
5. Or, press the “Play” “REW” “FF” “Stop” buttons on the front of the DVD/VCR machine as needed.
Note: For more advanced features (eg. Menu buttons), use the attached remote control.
6. Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound in the room.

C: Campus Cable TV Projection

1. Press the “Cable TV” button on the SmartPanel control.
2. Change the channel using the up/down channel buttons on the TV tuner panel.
3. Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound in the room.

D: Auxiliary Video Projection

1. Press the “Auxiliary Video” button on the SmartPanel.
2. Connect a video camera, or other video device to the inputs located next to the switching panel.
3. Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound in the room

E: Audio Only Playback

1. Press the “Power” button on the DVD/VCR machine to turn on the unit (left side).
2. Load a CD into the DVD Player.
3. Press the Volume “up” button until the desired level is reached.
4. Turn the player “off” when finished and press the “projector off” button to turn off the system.