

DH-135 Projection Quick Start Guide

Press the “Projector On” button on the SmartPanel Control **once**. (Wait 90sec for the warm-up.)

Press the “**Projector Off**” button on the SmartPanel Control before you leave the room.

Make sure the **Audio Amp** controls for “**Master**” & “**VCR**” are set to the **straight up position**.

If you have problems with this system, Dial “O” or 4-2867 from the classroom phone.

A: Computer Projection

- 1: Connect the 15-pin VGA/Audio cable located on the side of this bench to the external video monitor and audio ports on your computer.
- 2: Press the button marked “Computer” on the SmartPanel control panel.
- 3: Set your computer’s display resolution to a maximum of **1024x768**.
- 4: Adjust your laptop for either dual or external monitor support.
- 5: Connect your Ethernet cable to the jack on the SmartPanel.
- 6: Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound in the room.
- 7: When finished, replace VGA/Audio cable on the hook provided below the connection panel.
(See your desktop support technician for more information on setting up items 3, 4 & 5.)

B: DVD or VCR Projection

- 1: Press the “Power” button on the DVD/VCR machine to turn on the unit. (left side)
- 2: Press the “DVD” or “VCR” button on the SmartPanel control panel.
- 3: Insert a DVD or a VHS tape into the unit.
- 4: The appropriate function buttons on the “**Machine Control**” will light up. This control is located on the side of the front bench. Different functions will light for DVD or VCR. Use these buttons to control your playback and to navigate the DVD menus.
- 5: Or, press the “Play” “REW” “FF” “Stop” buttons on the front of the DVD/VCR machine as needed.
- 6: Turn the player “off” when finished.

C: Campus Cable TV Projection

- 1: Press the “Power” button (left side) on the DVD/VCR machine to turn on the unit.
- 2: Press the “VCR” button on the SmartPanel control panel.
- 3: Using the up and down **navigation buttons** on the “**Machine Control**”, select the channel you need to view. You can also use the channel up/down buttons on the Player.
- 4: Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound in the room.
- 5: Turn the player “off” when finished.

D: Auxiliary Video Projection


- 1: Press the “Auxiliary Video” button on the SmartPanel control panel.
- 2: Connect a video camera, or other video device to the inputs located below the VGA cable on the panel on the side of the front bench.

E: Audio Only Playback

- 1: Press the “Power” button (left side) on the DVD/VCR machine to turn on the unit.
- 2: Load a CD into the DVD Player.
- 3: Press the Volume “up” button until the desired sound level is reached.
- 4: Turn the player “off” when finished and press the “projector off” button to turn off the system.

MACHINE CONTROL

VHS

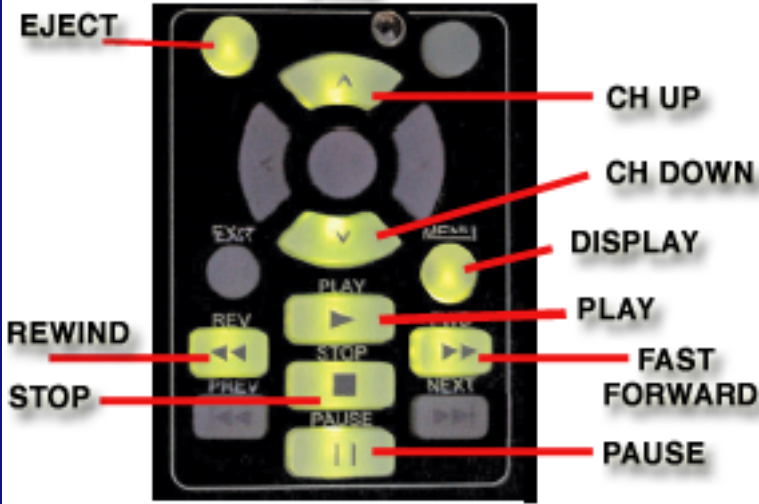

DVD

