

# Smart Classroom Projection Quick Start Guide

Press the **“ON/OFF”** button (Green dot) on the Sharp Remote Control **Once (Wait 90sec for the warm-up)**

Press the **“ON/OFF”** button on the PA System (Square Red Button).

*To Shut Down the Projector:* Press the **“ON/OFF”** button **twice** before you leave the room.

If you have problems with this system, Dial **“O”** or 4-2867 from the classroom phone.

## A: Computer Projection (Audio Cables are available at the IRC Media Services Desk, 4-2888)

1. Select the “Computer” button on the Sharp remote control (Red dot).
2. Connect the 15-pin VGA connectors to the monitor port on your laptop.
3. Set your computer’s display resolution to a maximum of **1024x768**.
4. Adjust your laptop for either dual or external monitor support.
5. If needed, connect audio cable to the PA System, then adjust the volume “Black Knob”.

(See your desktop support technician for more information on the settings needed for 2 or 3.)

## B: DVD or VCR Projection (Turn the player “off” when finished)

1. Select the “TV” button on the Sharp remote (Blue dot).
  2. Set the **Auxiliary Input Switch** (silver switch on PA Panel) to “TV In” and adjust the volume (Black Knob)
  3. Press the “Power” button on the DVD/VCR machine to turn on the unit (left side).
  4. Insert a DVD or a VHS tape into the unit.
  5. Press the “VCR” or “DVD” button *on the coil cord attached remote control* to enable the appropriate function buttons.
  6. Or, press the “Play” “REW” “FF” “Stop” buttons on the front of the DVD/VCR machine as needed.
- **Note:** For more advanced features (eg. Menu buttons), use the attached remote control.

## C: Campus Cable TV Projection (Turn the player “off” when finished)

1. Select the “TV” button on the Sharp remote (Blue dot).
2. Set the **Auxiliary Input Switch** (silver switch on PA Panel) to “TV In” and adjust the volume (Black Knob).
3. Press the “Power” button on the DVD/VCR machine to turn on the unit (left side)
4. Press the “VCR” button *on the coil cord attached remote control*.
5. Change the channel using the up/down channel buttons on the DVD/VCR machine (left side).