

DH-515 - Enhanced Classroom: Pixie Controller Projection Instructions

To Start - Press the “On” button on the Pixie Projector Controller **once only.**

(Wait 90seconds for the projector warm-up.)

Press the “Projector Off**” button on the Pixie Controller before you leave the room.**

If you have problems with or questions about this system, Dial “O” or 4-2867 from the classroom phone.

Computer Projection / Computer-1 input

- 1: Connect the 15-pin VGA cable and attached audio cable to the monitor and audio-out ports on your laptop.
- 2: Set your computer’s display resolution to **1024x768**. Higher resolutions may work but this is the optimum setting for the projector.
- 3: Press the “UPPER LEFT” source button marked “COMPUTER” on the Pixie Controller
(You should see the input displayed on the upper right corner of the projection screen)
- 4: Adjust your computer for either dual or external monitor support.
- 5: Use the volume “UP” and “Down” button on the Pixie Controller to control the sound level in the room.
- 6: When finished, press the “Off” button on the Pixie controller to turn off the projector and return the VGA cable to the storage hook.
(See your desktop support technician for more information on the settings needed for 2 or 4.)

Meteorology Computer Projection / Computer-2 input

- 1: Press the “UPPER RIGHT” source button marked “COMPUTER” on the Pixie Controller **(You should see the input displayed on the upper right corner of the projection screen)**
- 2: When finished, press the “Off” button on the Pixie controller to turn off the projector.
(See the Meteorology Dept. desktop support technician for more information on the operation of this computer system)

To Project From Other Video Sources

- 1: Connect your DVD, VCR or other device to the Video/Audio connections on the VGA wall plate using standard video (yellow) and audio (red & white) VCR connection cables.
- 2: Press the “VIDEO” button on the Pixie Controller to select the “Video” input.
(You should see the input displayed on the upper right corner of the projection screen)
- 3: Operate your device in its normal fashion.
- 4: Use the volume “Up” and “Down” button on the Pixie Controller to control the sound level in the room.
- 5: When finished, press the “Off” button on the Pixie controller to turn off the projector.

To activate the Closed Caption decoder in the projector, press the “CC” button on the Pixie Controller. To deactivate it, press the “CC” button again.

AT-VS 8/11

