

Smart Classroom Projection Instructions

Press the **“Projector On”** button on the SmartPanel Control once only. (Wait 90sec for the warm-up)

Press the **“Projector Off”** button on the SmartPanel before you leave the room.

If you have problems with or questions about this system, Dial **“O”** or 4-2867 from the classroom phone.

A: Computer Projection

- 1: Your laptop can be placed onto the opened (lowered) DVD/VCR compartment if desired.
- 2: Connect a 15-pin VGA/Audio cable to the external monitor port and audio output port on your computer.
- 3: Press the button marked either “Computer 1 or 2” on the SmartPanel control depending on the cable you’ve selected. The cables are labeled.
- 4: Set your computer’s display resolution to **1024x768**. Higher resolutions may work but this is optimum for the projector.
- 5: Adjust your laptop for either dual or external monitor support.
- 6: Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound level in the room.
- 7: When finished, replace VGA/Audio cable on the hook provided near the connection panel.
(See your desktop support technician for more information on the settings needed for 4 or 5.)

B: DVD or VCR Projection (Turn the player “off” when finished)

- 1: Open (Lower) the DVD/VCR compartment.
- 2: Press the “Power” button on the DVD/VCR machine to turn on the unit (left side).
- 3: Press the “DVD/VCR” button on the SmartPanel control.
- 4: Insert a DVD or a VHS tape into the unit.
- 5: Press the **“Drive Select”** button on the attached remote control to enable the appropriate functions.
- 6: Press the “Play” “REW” “FF” “Stop” etc. buttons on the front of the DVD/VCR or the remote control.
- 7: Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound level in the room.
Note: For more advanced features (Menu Navigation, Closed Caption, etc.), use the attached remote control.

C: Campus Cable TV Projection (Turn the player “off” when finished)

- 1: Open (Lower) the DVD/VCR compartment.
- 2: Press the “Power” button on the DVD/VCR machine to turn on the unit (left side).
- 3: Press the “DVD/VCR” button on the SmartPanel control.
- 4: Press the **“Drive Select”** button on the attached remote control, select **“VHS”** to activate the channel tuner.
- 5: Call “0” to get channel tuning information for your playback reservation.
- 6: Using the remote control, select the appropriate campus cable channel by pressing the numbers on the number pad, (for example: 0 and 4 for channel 4,) or by pressing the up/down channel buttons. You can also use the up/down channel buttons on the DVD/VCR to select a channel.
- 7: Use the volume “UP” and “Down” buttons on the SmartPanel to control the sound level in the room.

D: Auxiliary Video/Audio Projection

- 1: Press the “Auxiliary Video” button on the SmartPanel.
- 2: Connect a video camera, or other video/audio device to the inputs located under the white (black) board.
Note: For audio only Auxiliary sources such as iPods, the projector must be turned on.

E: CD Audio Only Playback (The projector does not need to be on for this operation)

- 1: Open (Lower) the DVD/VCR compartment.
- 2: Press the “Power” button on the DVD/VCR machine to turn on the unit (left side).
- 3: Load a CD into the DVD Player.
- 4: Press the Volume “up” button until the desired sound level is reached.
- 5: Turn the player “off” when finished and press the “projector off” button to turn off the system.