


ART 133 RH Quick View & FAQ

Room Photo



Diagram

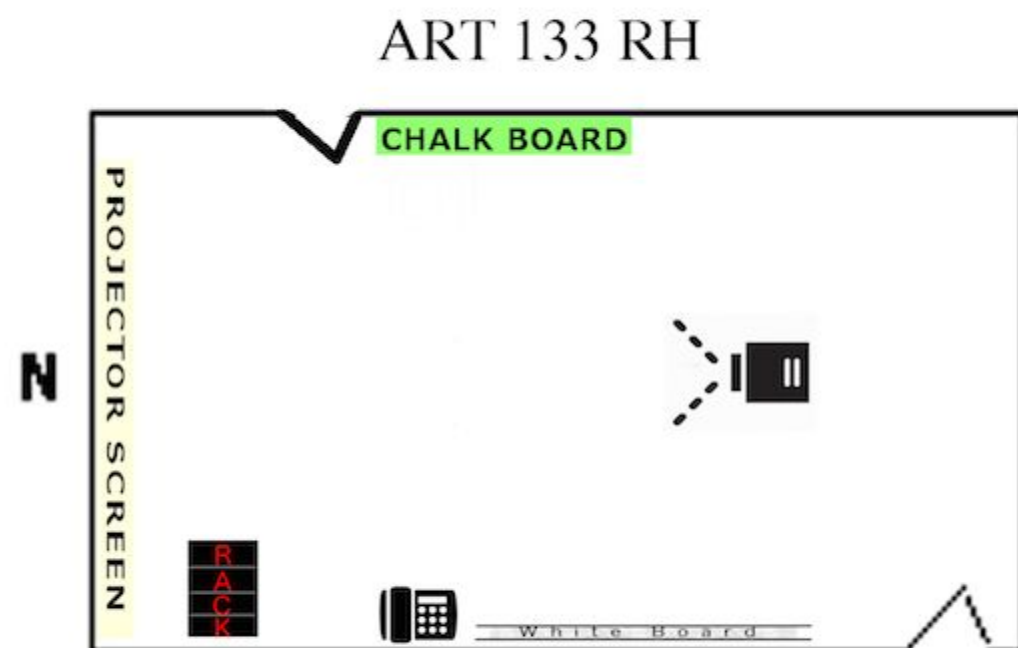

Control Device

SP Rack



Available Cable Connections

VGA+Audio
HDMI

Display Options & Sources

Projector: Panasonic 530
DVD/VCR: Panasonic

Frequently Asked Questions • FAQ

IS THE PROJECTOR ON?:

Ensure you've pressed the projector ON button on the SP Controller.

While warming up, the SP controller's warmup LED will be lit, the lamp on the projector will be dimly lit. When fully on, the lamp will be brightly lit and the projector screen will be blue. The SP's projector "ready" indicator LED will be lit.

WHY IS THERE NO DISPLAY?:

If the screen is BLUE, the projector is on. If you've selected your input and nothing happens: Try SLOWLY switching back and forth between inputs.

(Ensure all cables are plugged in securely in their inputs & on your device. Ensure your display settings are correct (⌘ + F1 on MAC, or ⌘ + SPACEBAR then type Display, ⌘ + P on PC) [Mirroring/Dual Monitor/Duplicate].

WHY IS THERE NO SOUND?:

Ensure the VGA's Audio cable or the HDMI cable is securely plugged in. Ensure the amp power switch at the bottom of the rack is turned on. Check volume level on SP panel (LEDs will be lit).

Check device volume & sound settings. (Right click sound icon on PC & change playback devices. Enter sound settings on mac (option click on sound icon) and change output device).

HOW DO I FIND MY OPERATING SYSTEM INFO?:

MAC: Right click (Ctrl Click) on the  APPLE symbol at the top right of your screen >> Click "About this Computer"

PC: Windows ⌘ logo key + R, type winver, then select OK.